

Description of Android eRemote APP Connection


Function of eRemote APP is identical to eRemote PC. Users can directly operate and monitor HMI via the Android platform on mobile phone or tablet PC.

NOTE :

- ✓ Please apply Android system for version 4.1.2 or above.
- ✓ eRemote APP only supports Android platform, iOS is not supported at the moment.
- ✓ eRemote APP only supports A and B series of Ethernet-type HMI.

See followings for the brief introduction of installation and eRemote APP function.

Before installing eRemote APP, please go to *Security* setting and check *Unknown Sources* to allow the application installation from unknown source.

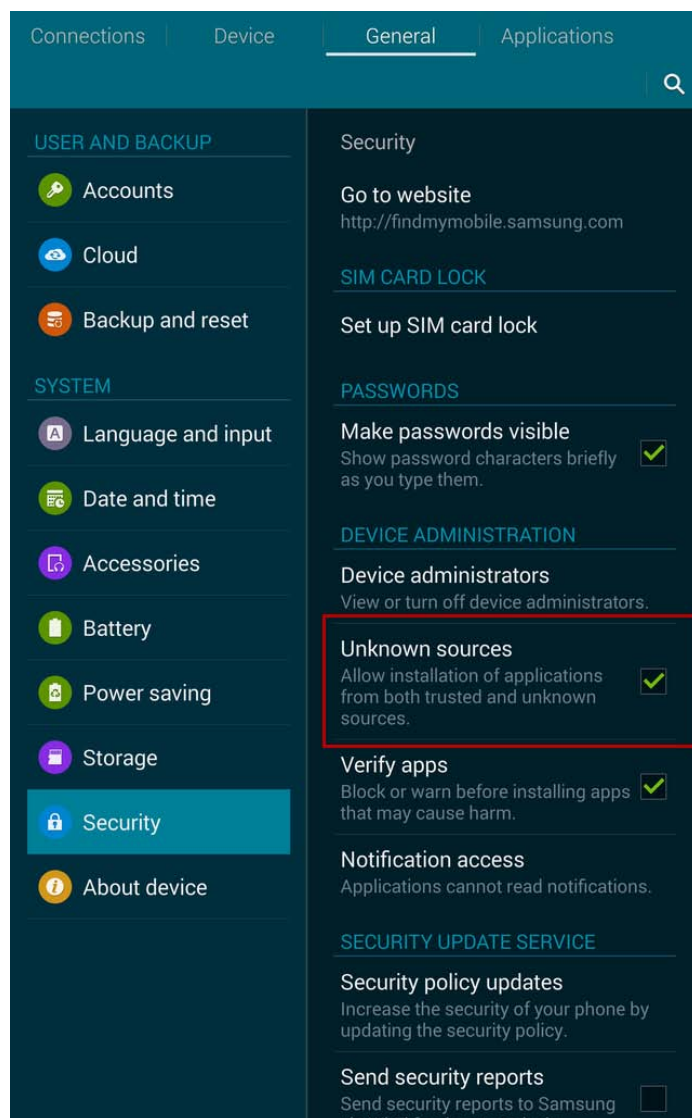


Then, click Android eRemote App (***DOP eRemote Mobile 0.0.1.0 OCT 21 2014 BETA.apk***) downloaded from Delta website for installation. Following describes the steps when connecting eRemote APP to HMI.

1. HMI Setting

Step 1: Please select Ethernet-type HMI. Here we choose *DOP-B10E615* as the example.


Step 2: Please create a numeric entry element.

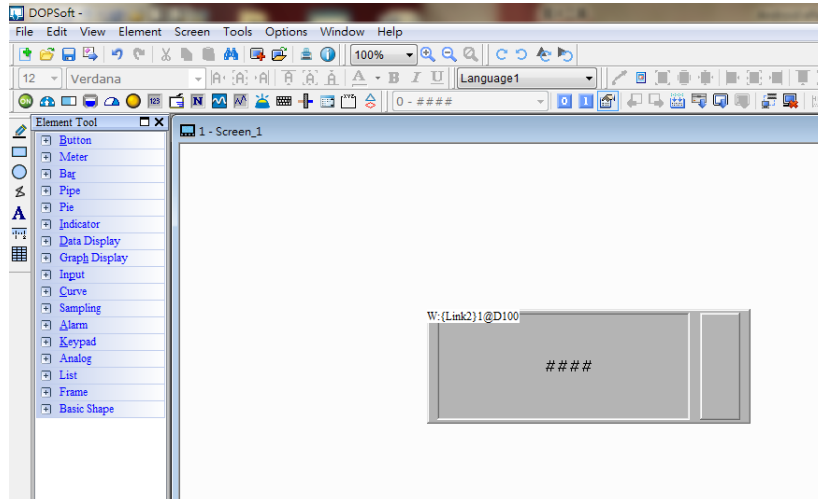

Step3:Go to【 Options 】→【 Communication Setting 】→【 Ethernet 】→【 LocalHost 】.

Check *Overwrite IP* to manually enter the IP address or check *Obtain an IP address automatically*. In this Example, *Obtain an IP address automatically* is selected, and the IP address is 192.168.0.101. Make sure you do check


【 Enable 】 Network (eRemote / eServer / Ladder Monitoring). The default password for connection is 12345678.

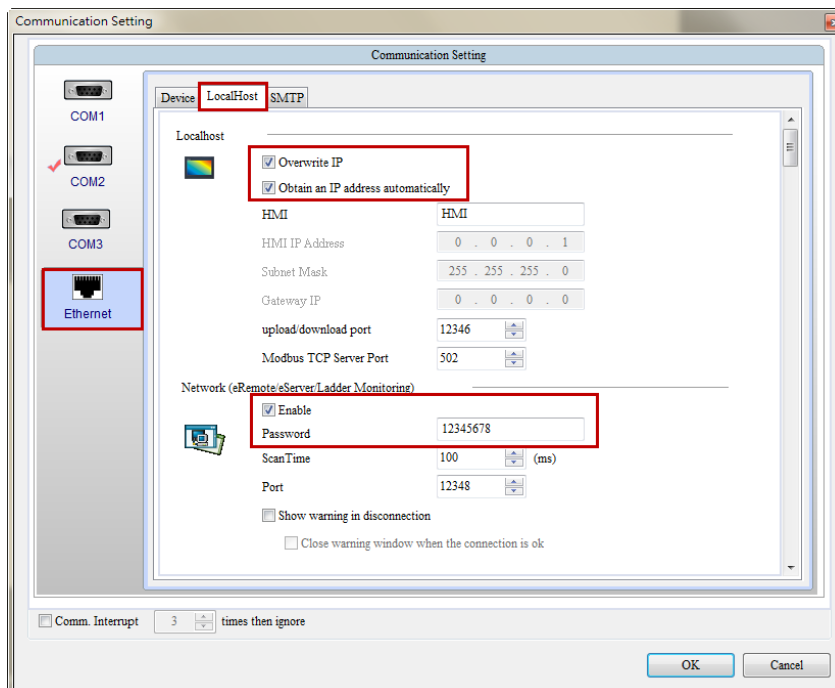

Step 4 :Click OK. After compiling, download the screen data to HMI.

2. eRemote APP Setting


When the installation is complete, click eRemote APP for execution and the screen will show as below:

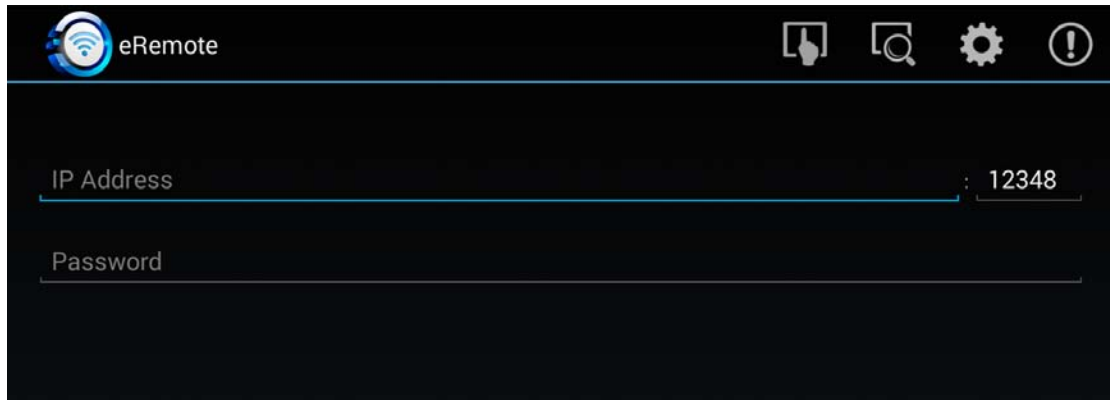




You can find connection method, advanced setting and eRemote APP version here.


2.1 Advanced Setting




Click this icon . Go for setting up *Screen orientation*, *Default resolution* and *Theme*.

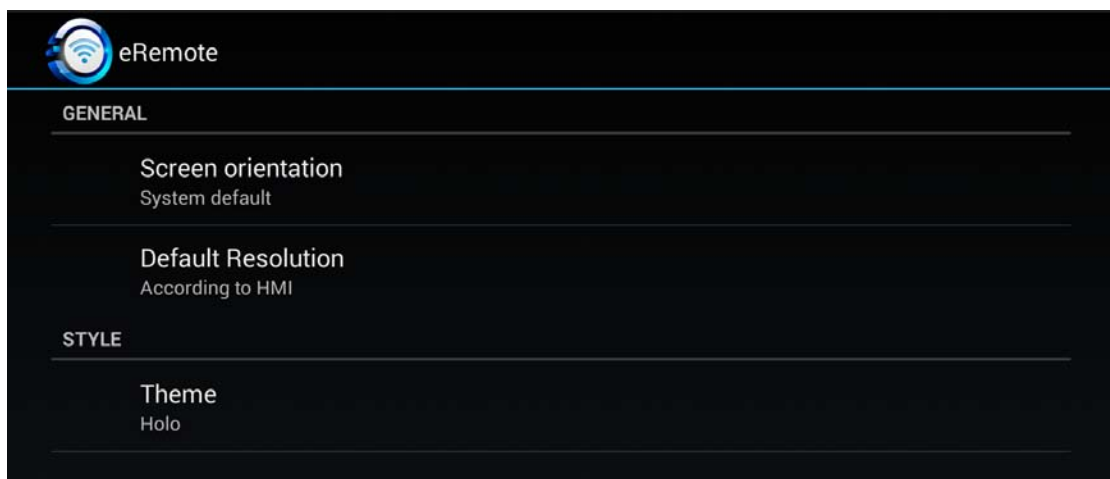

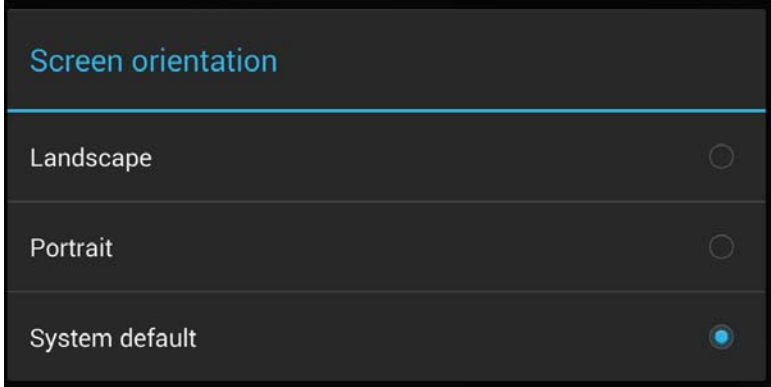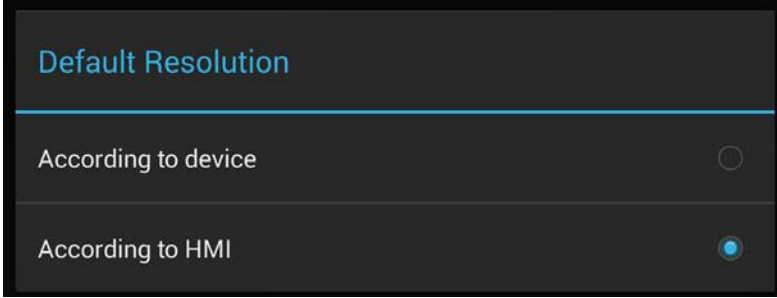
<p>Screen Orientation</p>	<ul style="list-style-type: none"> ➤ Users can choose <i>Landscape</i>, <i>Portrait</i> or <i>System default</i> as the setting for screen orientation.  <ul style="list-style-type: none"> ➤ Landscape: The screen is displayed in horizontal direction. ➤ Portrait: The screen is displayed in vertical direction. ➤ System default: The display orientation is determined by mobile phone or tablet PC.
<p>Default Resolution</p>	<ul style="list-style-type: none"> ➤ You can choose <i>According to device</i> or <i>According to HMI</i> to set as <i>Default resolution</i>  <ul style="list-style-type: none"> ➤ According to device: The resolution will be identical to the mobile phone or tablet PC, which means the screen will be full-screen displayed. ➤ According to HMI: The resolution will be identical to the connected HMI, which means the screen size is determined by HMI.
<p>Theme</p>	<ul style="list-style-type: none"> ➤ Three themes are available, namely <i>Holo</i>, <i>Holo Light Dark ActionBar</i> and <i>System Default</i>.

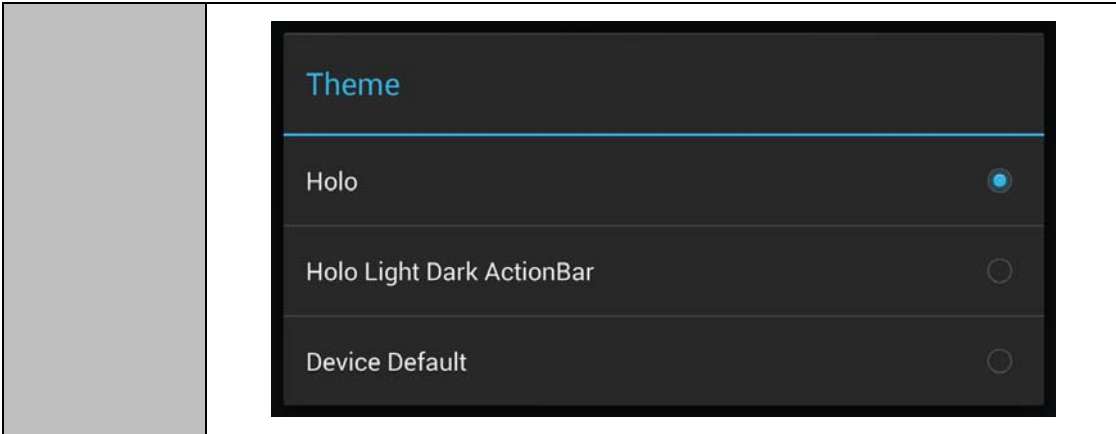

2.2 Detailed Information


Click this icon  to display the information about eRemote APP version.

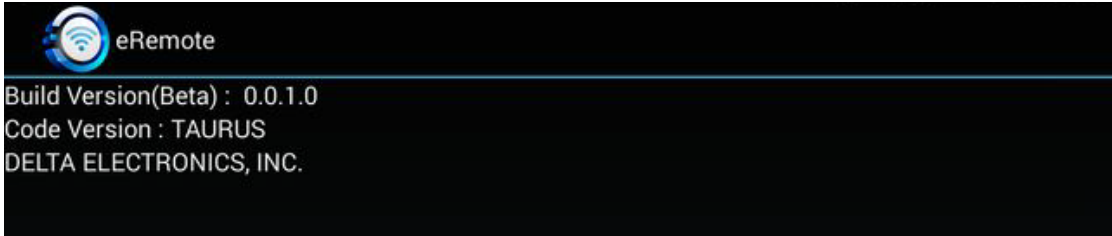


2.3 Connection Method


2.3.1 Enter IP Address Manually

This screen is for manually entering HMI IP address and password. The connected HMI IP address is 192.168.0.101 and the default password is



12345678. Click the icon , which is marked in a red bracket, for connecting eRemote APP to HMI.

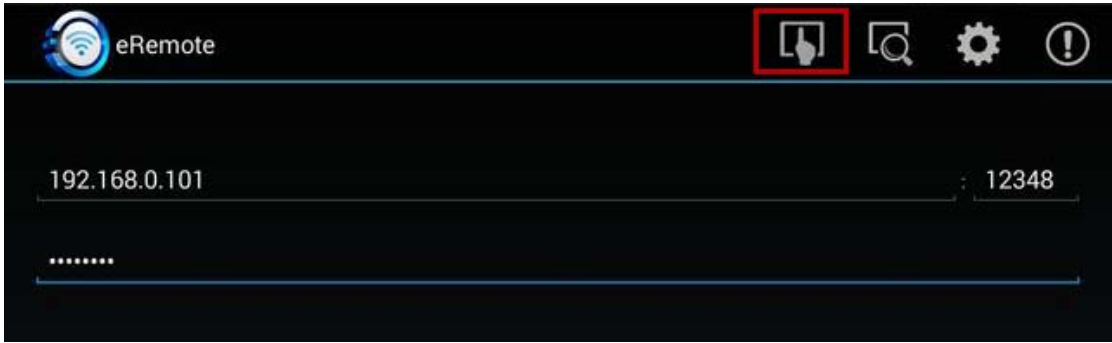

2.3.2 Search IP Address through the Internet

Users also can search HMI through the Internet (by clicking the icon ).

See the figure below. Click the found HMI and enter the password for connection (the default password is 12345678).

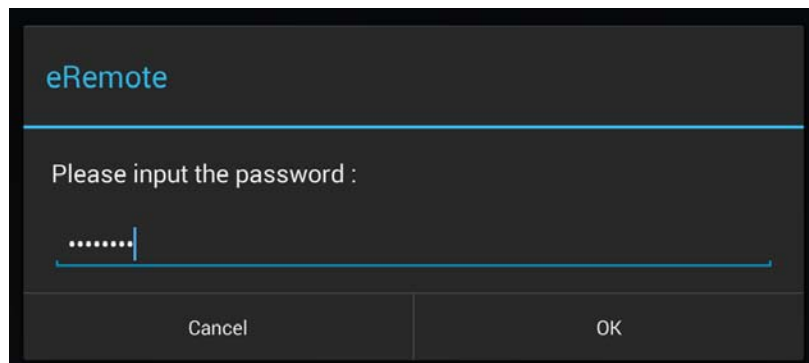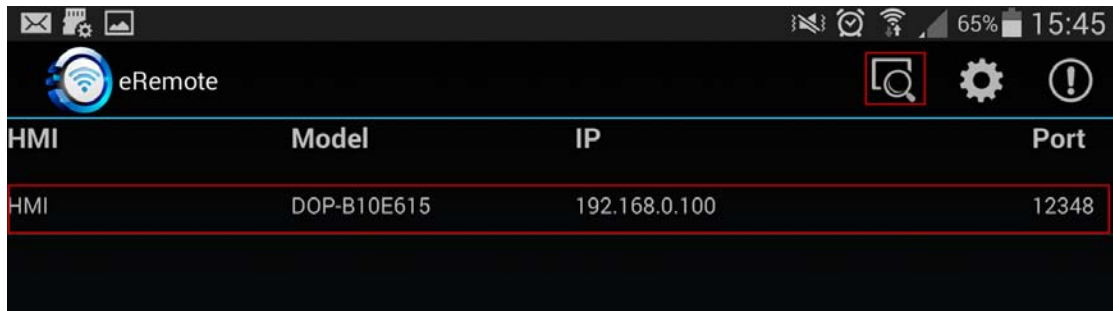


When it is successfully connected, you can now start to remote control HMI.
Then, the screen will be shown as below.




2.4 Operation




When successfully connect to HMI, users can zoom in, zoom out or move the

screen by clicking this icon . After clicking, this icon will become the

unlocked one , which means the screen display is adjustable. Click

, the screen will return to normal size.

NOTE :

- ✓ When it shows locked icon , it is unable to remote control HMI. Users can only move, magnify or minimize the screen.(When the locked icon  is shown, remote controlling HMI is disabled.)
- ✓ To remote control HMI, the icon should be shown as locked , which means it is in HMI operation mode.

2.5 Disconnection

To disconnect HMI and eRemote APP, click on the returned button on mobile phone or tablet PC. A message window will pop up and ask if you are sure to break the connection. (A pop-up window will show and ask for your confirmation to disconnect.)

